

How to replace your belt

1. Take off the tire and fender.



2. Remove the muffler.



3. Remove the muffler mounting bracket and the eight 8mm bolts that hold the CVT cover on.



4. Remove the CVT cover.



5. Remove the nut on the variator and take off the fan.
(An impact wrench works best)






6. Replace the belt by putting it on the pulley on the clutch side first. Squeeze the pulley in about $\frac{1}{4}$ " so the belt will sit inside. (ONLY A LITTLE)



DO NOT PUT THE BELT ALL THE WAY INSIDE THE PULLY.

7. Slide the other end of the belt over the variator shaft. Replace the fan and nut.

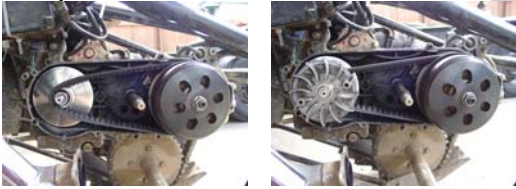

8. Replace the CVT cover, the muffler mounting bracket, and muffler.



9. Replace the tire and fender and RIDE, RIDE, RIDE!!!

